



# QUICKERTEK™

BEFORE YOU CAN THINK IT

**acNano**  
**802.11 a/b/g/n/ac**

Kit contains following items:

- **acNano USB device**
- **Instruction Manual**


---

First, you need to change your Mac's Gateway settings.

1. Click on the **System Preferences** icon in the dock.




2. Click on the **Security & Privacy** icon.

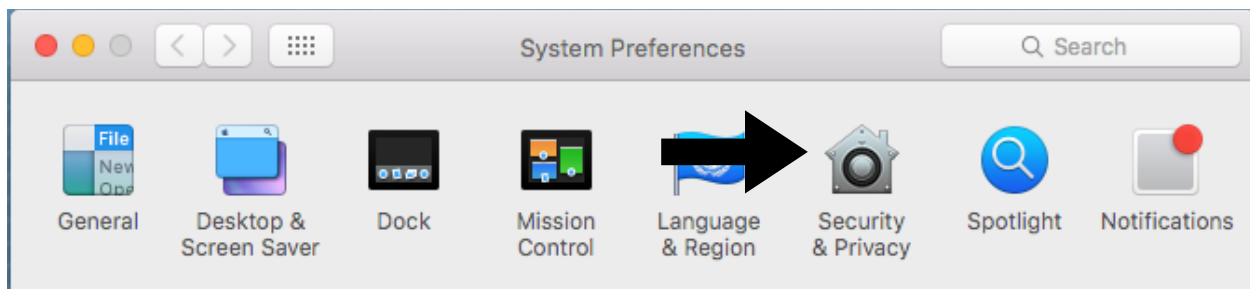

3. If the lock at the bottom is closed, click to open and allow changes.

**Under Allow apps downloaded from:** change the selection to **Anywhere**. Then click the lock again to save changes.

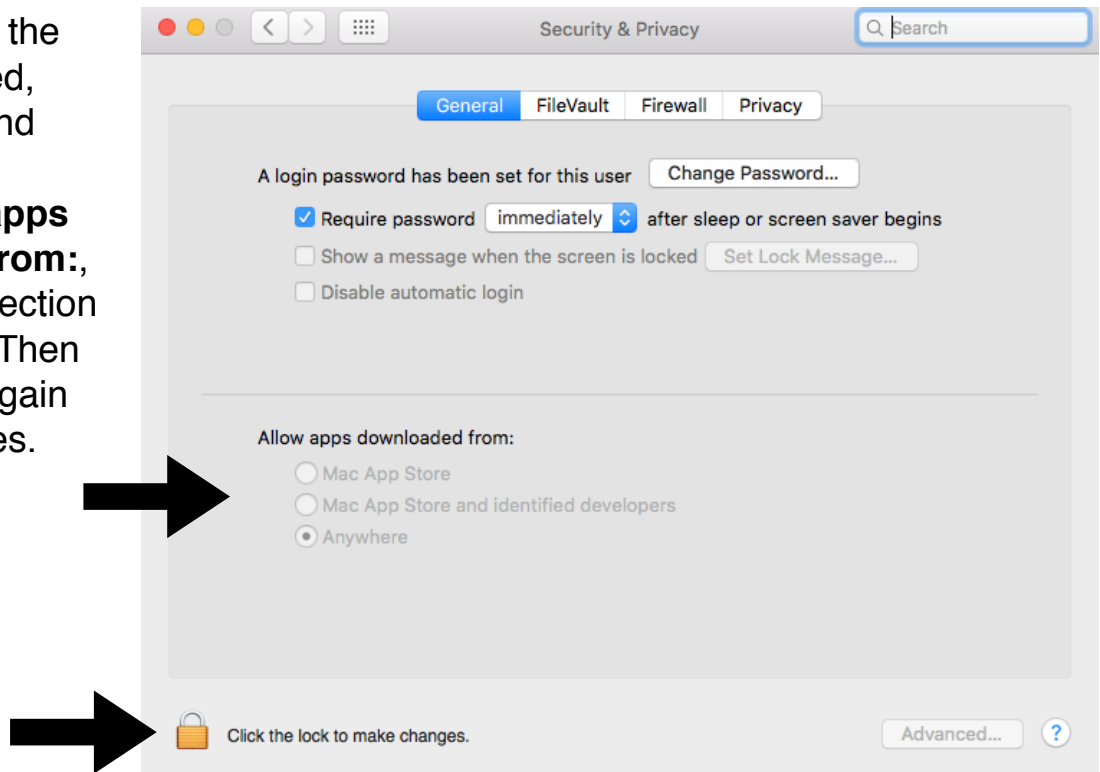


**Your Mac's Gateway settings are now changed!**

Now, you will need to turn off your Mac's WiFi. The Wi-Fi does not need to be off to work. This is just to prevent user confusion.

1. Click the **Wi-Fi** icon in the menu bar.




2. Click **Turn Wi-Fi Off** in the drop down menu.

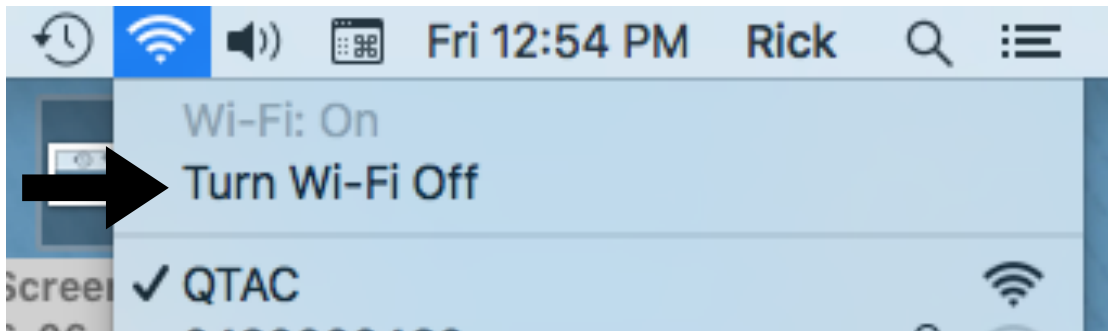


**Your Mac's Wi-Fi is now turned off!**

You will need to run the Uninstall in the driver folder before installing the software.

1. Click on your downloaded driver folder titled **EW-7822UAC\_Mac\_driver\_v1.0.2.7**.

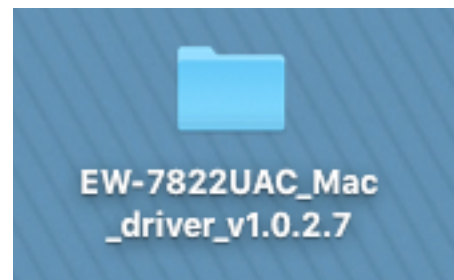


2. Click on **Uninstall.pkg** and follow the instructions.

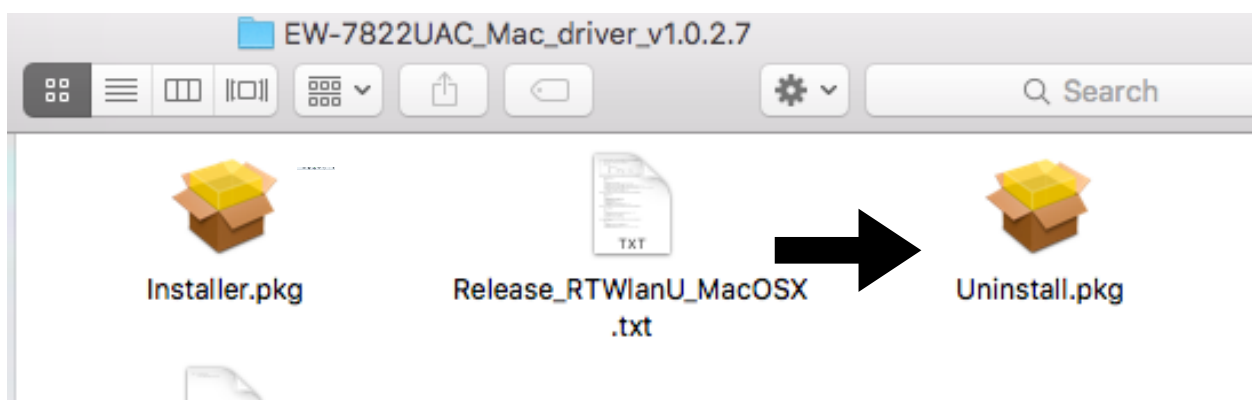


**You have now ran Uninstall on your Mac!**

You are now ready to install the software for your acNano.

1. Click on your downloaded driver folder titled **EW-7822UAC\_Mac\_driver\_v1.0.2.7**.

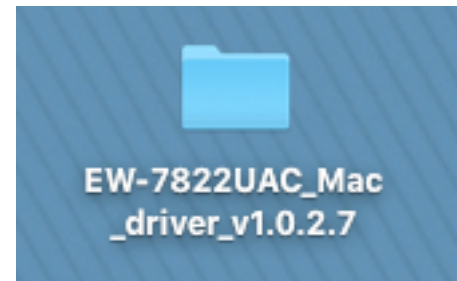

2. Click the **Installer.pkg** and follow the instructions.

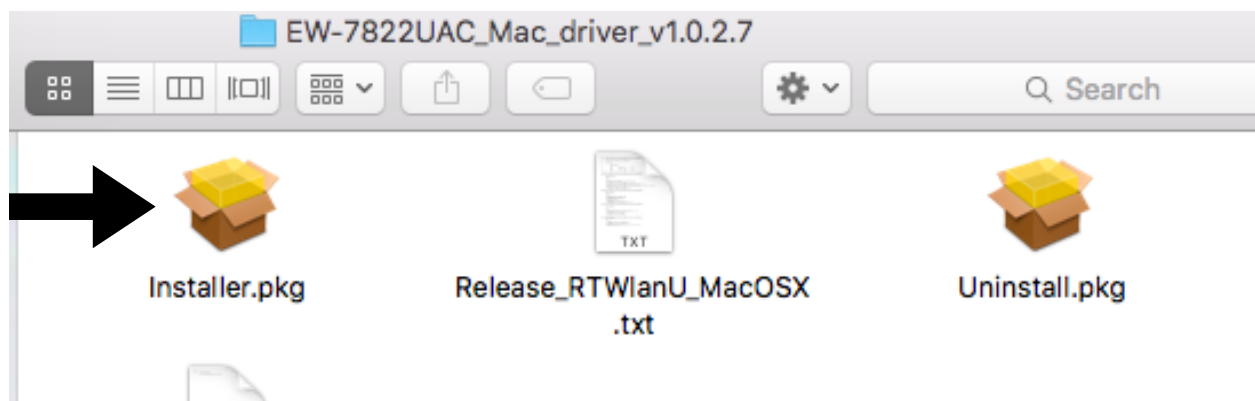

**You have now installed the software for your new product on your Mac!**

Now plug in your acNano and test it out.


1. Plug the acNano into the USB port. The menu will look like this.



2. Click on the **Wi-Fi** icon in the menu bar.




3. Click on the **Open Network Preferences...** in the drop down menu.




Join Other Network...  
Create Network...  
Open Network Preferences...

4. If the lock at the bottom is closed, click to unlock and allow changes. Then highlight the USB driver network like below, click the + sign and click **Apply**.

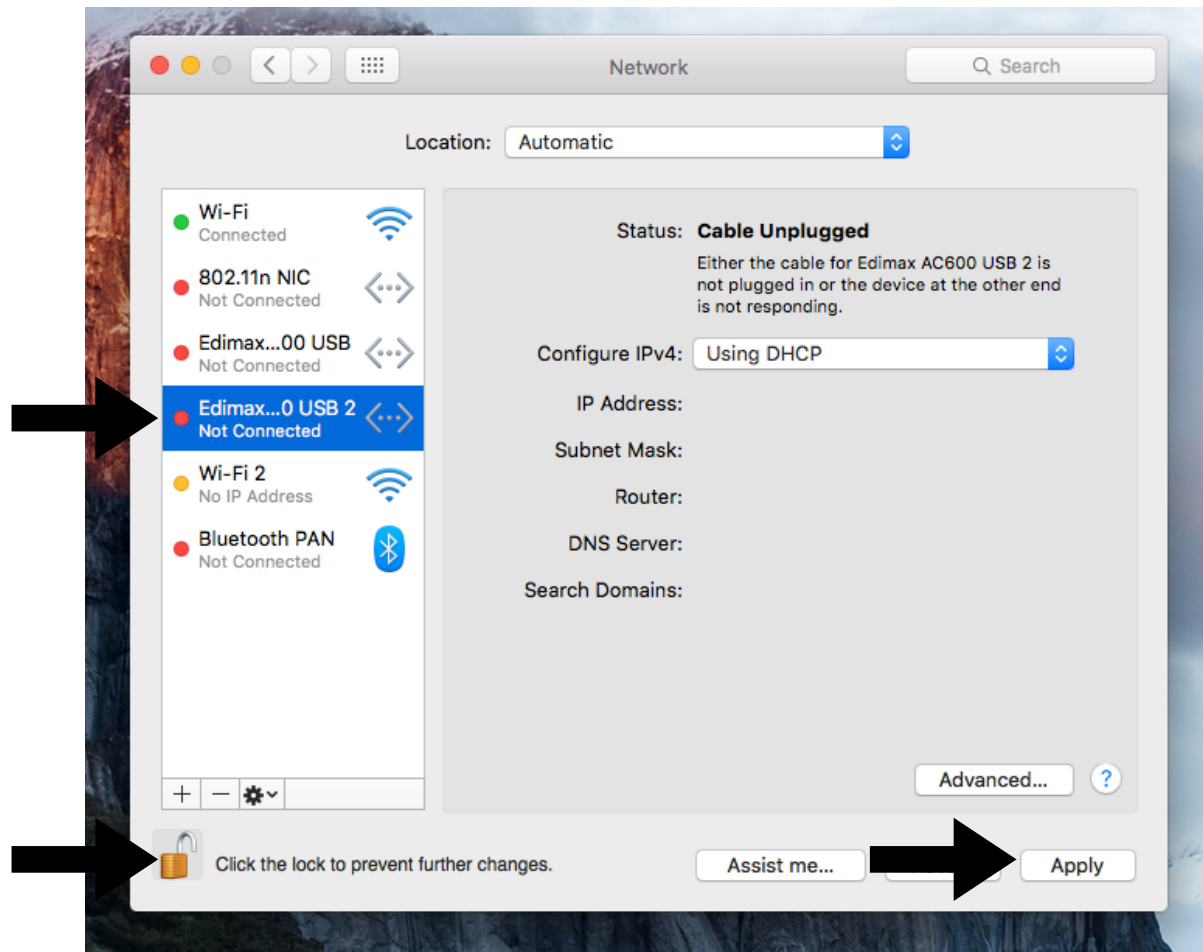

5. Select the correct network in the **Network** drop down menu.

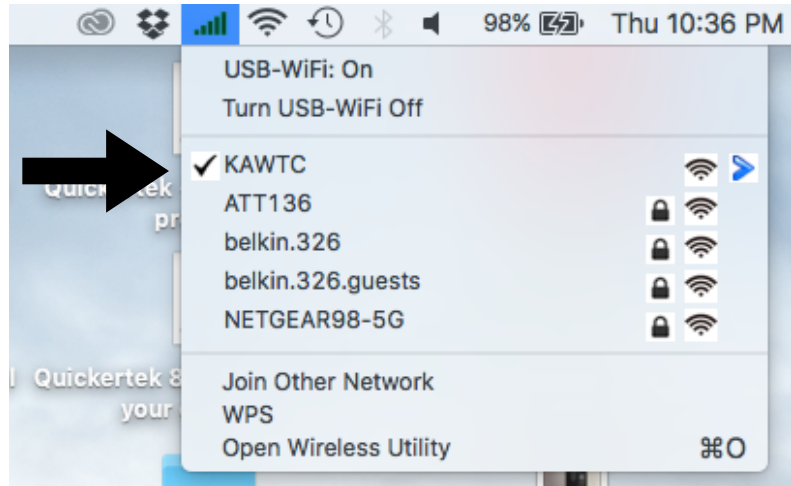

6. Your menu bar should look like this. The blue LED on the acNano device should also be flashing.



**Enjoy your QuickerTek acNano!**